Cool Max II

User Manual

Please read through the manual before operating the system

Attention:

Please install two Cryolipolysis hand pieces correctly before filling the water into the water tank.

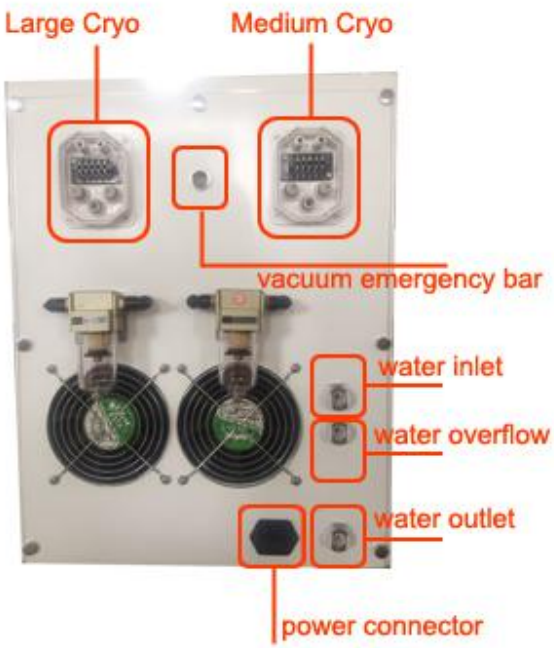

Applicator Description and Installation:

1.Large Cryolipolysis hand piece:

Combines the cryolipolysis,Vacuum and Photon Dynamic.

Take the cryolipolysis hand piece on the holder at the right side,then insert it into the Cool L socket.

2.Medium Cryolipolysis hand piece:

Combines the cryolipolysis,Vacuum and Photon Dynamic.

Take the cryolipolysis hand piece on the holder at the left side,then insert it into the Cool M socket.

Cryolipolysis Hand pieces with touch screen:

The operation is same and simultanously as the main interface

3.Emergency Stop Switch:
It is designed to control the vacuum function,press it to release all the suction.
(pls ask your patients to take it during the cryolipolysis treatment,if any emergency,then they could press it to release all the suction).
Insert it into the emergency bar socket.

Filling water into the water tank(recommended two times):

1.Insert two tubes into the water inlet hole and overflow hole.
2.Filling the water into the water tank.
3.When the overflow pipe flowing the water out,then stop filling the water.
4.Star the cryolipolysis functions for about 2 mins.
5.Then stop the machine and filling the water again like the step 1 till the overflow tube flow out the water then stop filling the water,till now filling water is finished.
and you could do the cryolipolysis treatments now.

It is recommended that the water tank be filled again 1 time per 1 months.
(it also depends on the treatments times).

If you need to change the water,you need to drain the rest of water from the water tank.

1.insert two tubes into the overflow and water outlet holes.then the water will be flowing out from the outlet tube.

Note:when there is not enough water in the water tank or no water flowing,then the adding water reminder will display like following: then pls help to add enough water.

After-Sale Service

Warranty

stipulates the warranty for the original purchaser as follows:

- provides 12 months warranty period on its any product for any defect caused by material or manufacturing quality starting from the installation day.
- According to the warranty stipulation, responsibilities are limited to repair and replacement of the part and material recognized in conformity with above conditions.
- won't bear any responsibility for any damage caused by misapplication of the user or repair of disapproval

Out of Warranty

- A product that has no SERIES Number
- Applicators dropping or any shock
- Applicator acrylic rack

Maintenance Advantage

- Easy to check and confirm the problem
- Simple to find out the solution
- Quick to replace Function Module

Maintenance Policy

- Must provide the photo, even the Video depends upon the different situation

Without manufacturer’s permission, purchaser can’t send back the machine, otherwise, the purchaser has to bear the transportation fee and the customs tax and manufacturer has the right to refuse to handle.

Caution

Contraindication

Please avoid the treatment from the following patients

1. Pregnant women or women who may be pregnant
2. Cardiopaths
3. Patients with vascular diseases
4. Patients with pacemakers
5. Patients with therombosis and or thrombophlebitis
6. Patients being treated with anticoagulants
7. Patients who have undergone a transplant
8. Carriers of large metal prostheses
9. Diabetics
10. Epileptics
11. Patients with cancer.
12. Patients with heart diseases.
13. Patients with sensory or physical impairment.

Caution when use

The machine shoule be

Cryolipolysis Function

- Recommended room temperature be 25 to 29 centidegree.
- Do use protection of frost film to prevent skin frostbite.

After one client treatment or 2 hours usage, please allow about 20 minutes resting of system, it can prolong the lifetime of machine.

Operation:

Main operation interface:

1.Touch any place on this interface,then it turns to the parameter interface as following:

Operation:

Cryolipolysis:

1.set the treatment time TIME:

Touch − + to ajust the treatment time from 5 to 60 mins,(preset time:20 mins)

2.Set the vacuum suction mode VAC MODE:

Touch − + to ajust the vacuum mode amongM1,M2,M3,M4 modes.

3.set the vacuum power VAC POWER:

Touch − + to ajust the vacuum power level from 10% to 100% .

4.set the Cryo Level CRYO LEVEL:

Touch − + to ajust the cryo level from -10 to 5 centidegree.

5.Touch to heat 3 minutes,become red ,Then continue cooling,become white

6.Start button :touch it to start the treatment after all the parameter ajusted.

7.Pause button :touch it to pause the treatment.

Note:they system is designed 3 minutes heating massage program,but it is cooling by default,if you need the heating program at the beginning of thetreatment,pls touch to change into ; the temperature will be not more than 40 centi-degree,3 minutes later,the system will enter into Cooling state automatically.

Specification

Cryolipolysis temperature	5℃ to -10℃ adjustable
Heat temperature	40℃
Heat temp Advantages	avoid the frostbit during cryo treatment
Power	500W
Vacuum	-102KPa
PDT wavelength	650nm
Display	8.4 inch touch screen
Power supply	110V-120V/220V-240V, 50/60Hz